## **MODEL 114 Control Panel**

Single phase, simplex pump control with intrinsically safe circuits.

The Model 114 control panel is designed for applications requiring intrinsically safe float circuits or other circuit extensions. This panel will control one 120, 208, or 240 VAC single phase pump. Two control switches activate a magnetic motor contactor to turn the pump on and off. If an alarm condition occurs, an additional alarm switch activates the audio/visual alarm system. Common applications include pump chambers, lift stations, or other installations classified as hazardous locations requiring intrinsically safe circuits.

## PANEL COMPONENTS

- **Enclosure** measures 16 x 14 x 6 inches (40.64 x 35.56 x 15.24 cm) NEMA 4X (ultraviolet stabilized thermoplastic with removable mounting feet for outdoor or indoor use).
- 2. Intrinsically Safe Module limits the amount of energy to switches preventing ignition of flammable gases.
- 3. Intrinsically Safe Partition isolates the intriniscally safe wiring.
- 4. IEC Motor Contactor controls pump by switching electrical lines.
- 5. HOA Switch for manual pump control (mounted on circuit board).
- 6. Green Pump Run Indicator Light (mounted on circuit board).
- 7. Alarm Fuse (mounted on circuit board).
- 8. Control Fuse (mounted on circuit board).
- 9. Control Power Indicator Light (mounted on circuit board).
- 10. Alarm Power Indicator Light (mounted on circuit board).
- 11. Input Power Terminal Block
- 12. Ground Lugs
- 13. Circuit Breaker (optional) provides pump disconnect and branch circuit protection.
- 14. Overload Relay (optional) provides thermal overload protection for pump.


NOTE: Schematic/Wiring Diagram is located inside the panel on enclosure cover.

## STANDARD ALARM PACKAGE

- 15. Red Alarm Beacon provides 360° visual check of alarm condition.
- 16. Alarm Horn provides audio warning of alarm condition (83 to 85 decibel rating).
- 17. Exterior Alarm Test/Normal/Silence Switch allows horn and light to be tested and horn to be silenced in an alarm condition. Alarm automatically resets once alarm condition is cleared.
- 18. Horn Silence Relay (mounted on circuit board).

NOTE: other options available.

Model 114 control panels cannot be returned. Please refer to the Product Return section.

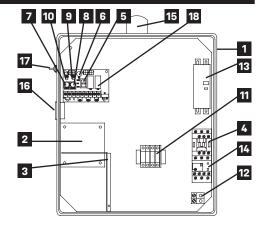

Model Shown 1141W114X

## **FEATURES**

- Industrial control panel is UL Listed relating to hazardous locations with intrinsically safe circuit extensions
- Dual safety certification for the United States and Canada
- Standard package includes three 20' control switches or EZconnex® float system
- Complete with step-by-step installation instructions
- Five-year limited warranty. This express warranty does not apply to the motor start kit components. SJE Rhombus will warranty motor start kit components supplied by SJE Rhombus for one year. SJE Rhombus makes no warranties of any type with respect to motor start kits supplied by a customer.



1-888-DIAL-SJE • 1-218-847-1317 1-218-847-4617 Fax

|     |   | 114  |  |  |   | W  |         |                                   | ] [   |  |  |   |  |   | ]   |   |  |   |               |
|-----|---|--|--|--|---|--|---------|-----------------------------------|-------|--|--|---|--|---|---|---|--|---|---------------|
| MOI | DEL   | . 114  |  |  | 1   |  | ,       |                                   | . L   | Т  |  |   |  |   | , ,   |   |  |   |               |
|     | 0 = 1 = ENC   W = STAI   1 = 9 = PUM   2 = 3 = 4 = PUM   0 = 1  | RM PACK select op alarm pack select op alarm pack to the select op alarm pack to the select of the s | etions<br>ckage<br>RATI<br>proof,<br>EVICI<br>mot<br>mot<br>LOAD<br>LA<br>FLA<br>FLA<br>MNEO<br>disc   | or no ala<br>e (include<br>NG —<br>NEMA 4)<br>E<br>or contac<br>or contac<br>or AMPS   | x (eng  | t/normal/ gineered = 20/208/2 20V only                   | 40V     | pe switch, toplastic)  DEVICE opt | ion § | ∂ above  | e)   |   |  |   |   |   |  |   |               |
|     | FLOAT SWITCH APPLICATION  H or L = pump down or pump up (select 17 option)  E = Ezconnex® float switch system (select 33 or 34 option)  WITH alarm package  WITHOUT alarm package  X = no floats  WITH alarm package  WITHOUT alarm package  OPTIONS Listed below |  |  |  |   |  |         |                                   |       |  |  |   |  |   |   |   |  |   |               |
|     | 1A<br>1C<br>1E<br>3A<br>3B<br>4A<br>4B<br>4D<br>5A<br>5E<br>5M<br>6G<br>8A<br>8C  | Red redu<br>(must sele<br>Redundar<br>Thermal of<br>(for pump<br>Seal fail a<br>(must sele<br>Auxiliary<br>Auxiliary<br>normally<br>Elapsed t<br>Event (cy<br>Overload   | on or ct 1E / no ct 1E / no ct 1E / no ct 1E / at sher larm   not off ct 1A / no ct 4A off cutous wife circular maconta open circular me crocle) (c protes y letter of the cutous y letter of the cutous wife circular maconta open conta open crocle) (c protes y letter of the cutous the cu | f floats indivisual f floats indivisual f floats individuals of floats individuals of float (mu t/heat se activation option 5E) a contact, act, dry, so (must selemeter counter section special visual popularian section special float fl | ncluded) ncluded nclude ator & st sell nsor a I switt I indic n Form eal fai ct opt | d, 3C not not not all all all all all all all all all al | 7 optio | n)                                |       | 11C<br>11D<br>12B<br>12C<br>14B<br>16A<br>16B<br>16C<br>17C<br>17D<br>17T<br>17T<br>19T<br>19U | NEM. Moto by S. Moto SJE F Disco padlo (muss 20-20-4 10° c 30° c 40° c Sens Sens MilliA Sens TOA through HOA through Door Ezco | A 1 alarm p<br>A 4X alarm<br>or start com<br>IE Rhombus<br>or start com<br>Rhombus (18<br>connect (roto<br>ckable in the<br>t select circ | panel (naponents) (18 x 16 enponents) x 16 enclary style, to OFF-positivit breat of 20' (prof 20 | nust select s supplied enclosure s mounted ition, door ker)  er float) per float) to per float y weight ly weigh ally weigh c) switcl tic) switcl n indicat | et op: d by a upgred and grade I thro r inted (per ghte er flo h an ch an tor ats ( | tion custorade) ad sujee)  A (pe) A (pfloated € boat) ad pu | 6A) omer, r pplied door, r door, r in the  | by non-fuse ON-pos at) float) un light run ligh | ed,<br>ition) |
|     | 10E<br>10F  | Clear inne<br>(lights and<br>Lockable I<br>Lightning<br>(must sele<br>Anti-conde   | switch<br>atch<br>arres<br>ect pu  | nes mounte<br>tor<br>mp circuit  | ed on i<br>t brea   | nner door)   |         |                                   |       | 33G<br>33H<br>34D<br>34E<br>34G  | EZCO<br>EZCO<br>seali<br>EZCO<br>seali<br>EZCO<br>seali<br>EZCO  | nnnex° 3-Po nnex° 3-Po nnex° 4-Po ng plug *           | rt, 25', v<br>rt, 50', v<br>rt, 25', v<br>rt, 50', v<br>rt, 25', v   | <ul><li>n/20' flo</li><li>n/20' flo</li><li>n/10' flo</li><li>n/10' flo</li><li>n/20' flo</li></ul>   | oats<br>oats<br>ats (<br>ats (  | (3) /<br>(3) / <sub>f</sub><br>(3) / <sub>f</sub><br>(3) /  | pipe of pipe o | clamp sclamp sclamp, lamp, clamp, clamp,        | k             |