


**HOOK KEY
INSTALLATION**

NOTES:

1. INSTALL HOOK KEY (6) IN SHAFT WITH COUNTERSUNK HOLE FACING SET SCREW (7).
2. TIGHTEN BLADE HARDWARE TO APPROPRIATE TORQUE (DRY) AS SPECIFIED IN O&M MANUAL.

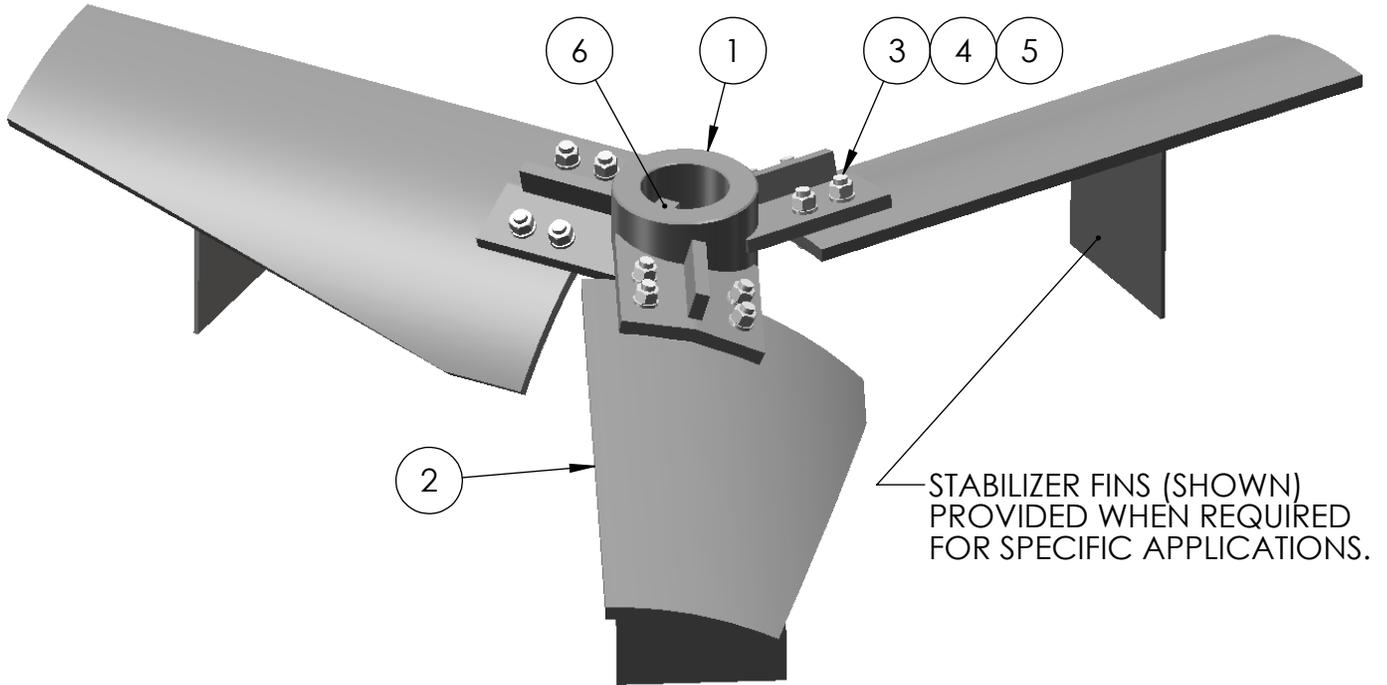

STABILIZER FINS (SHOWN)
PROVIDED WHEN REQUIRED
FOR SPECIFIC APPLICATIONS.

* QUANTITY VARIES DEPENDING
ON IMPELLER DESIGN

7	*	SET SCREW
6	1	HOOK KEY
5	*	HEX NUT
4	*	LOCK WASHER
3	*	HEX HEAD CAP SCREW
2	1	IMPELLER BLADE
1	3	IMPELLER HUB
NO.	QTY	PART NAME

FOR REFERENCE ONLY

* ALL DIMENSIONS AND WEIGHTS ARE FOR REFERENCE ONLY
UNLESS THE DRAWING IS CERTIFIED.

* ALL EQUIPMENT DESIGN AND APPLICATION DATA SHOWN
HEREIN IS CONFIDENTIAL AND THE PROPERTY OF BRAUN MIXER.
NO USE OR DISCLOSURE THEREOF MAY BE MADE WITHOUT OUR
WRITTEN PERMISSION.



12838 Stainless Drive
Holland, MI 49424

PH: 616-399-5600
FAX: 616-399-3084

**MIXER MODEL
AF3 IMPELLER ASSEMBLY**

WITH OR WITHOUT STABILIZER FINS
DIMENSION AND ASSEMBLY DRAWING

DRAWN BY: BSB DATE: 10/1/2018 © 2018

APPROVED BY: DATE:

DWG. NO. **A- TK0118**

REV.