
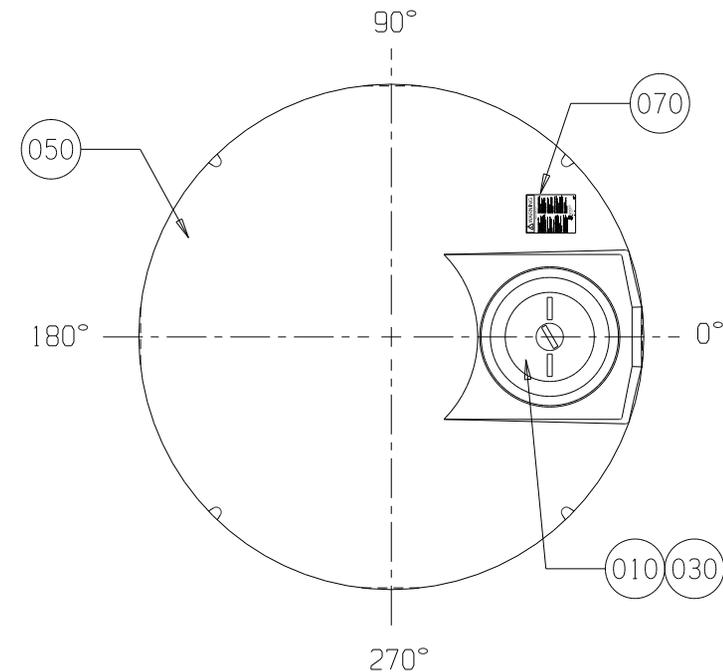


REVISIONS

REV	DESCRIPTION	DATE	APPROVED BY

INSTRUCTIONS:

1. FLASH PART AS NECESSARY.
2. HOT STAMP SERIAL NUMBER 1" BELOW MANWAY AS SHOWN PER SII PROCEDURE.
3. CHECK TO SEE THAT THE BAR CODE LABEL IS PROPERLY INSTALLED AT 0° AS SHOWN.
4. INSTALL MANWAY PER THE CUTSHEET FOR THAT MANWAY.
5. INSTALL DECAL AS SHOWN.
6. INK SII LOGOS PER PROCEDURE - 2 PLACES 0° AND 180°.
7. CLEAN TANK INSIDE AND OUT.
8. WIRE WARRANTY PACKAGE TO LID TIE.

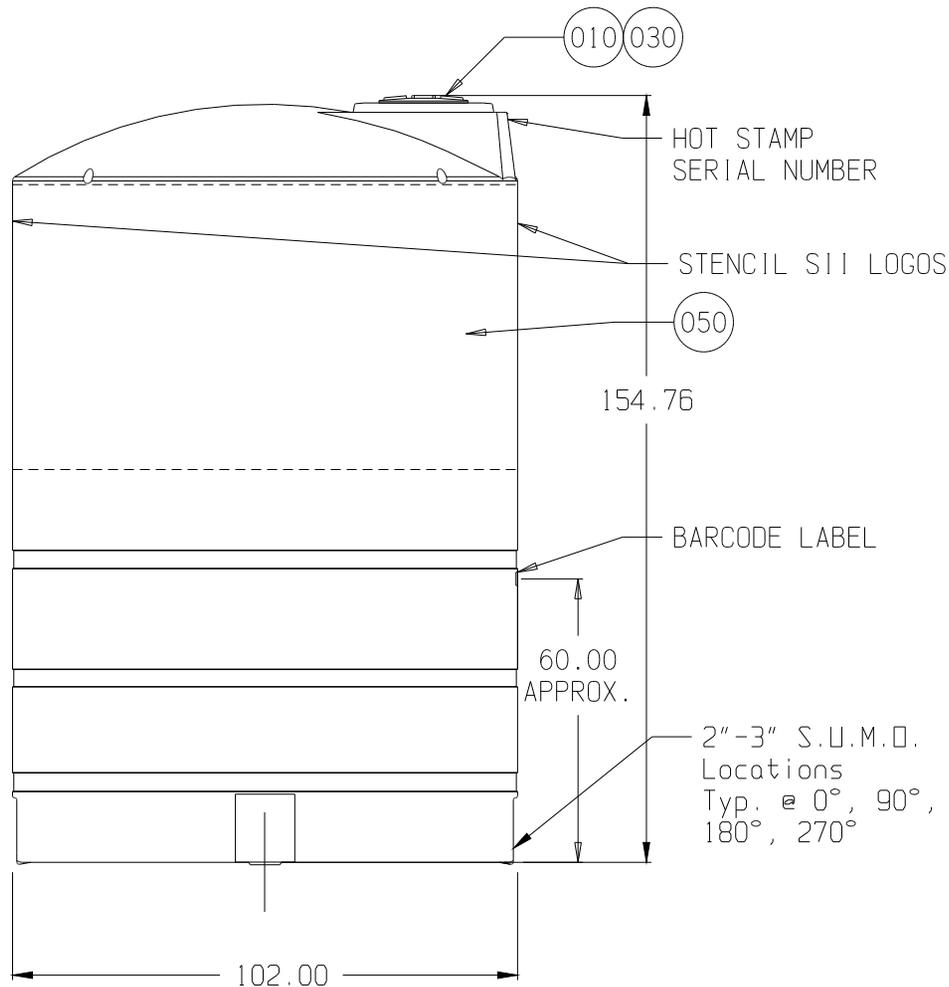

SEE BILL OF MATERIALS FOR A COMPLETE LIST OF COMPONENTS INCLUDING POWDER AND PIGMENT. ALL DIMENSIONS, DESIGNS, AND INFORMATION ON THIS PRINT MUST BE CONSIDERED PROPRIETARY TO SNYDER INDUSTRIES, INC. AND MAY NOT BE USED, COPIED, OR DISTRIBUTED WITHOUT WRITTEN PERMISSION OF AN OFFICER (OR HIS AGENT) OF THE FIRM.

SNYDER INDUSTRIES INC. LINCOLN, NE. 68504 PRODUCTION PROCESS INSTRUCTIONS

PART DESCRIPTION:
ASM TK 5000VDT X 102 NH

DRAWN BY: NLE | DATE: 07/18/2005 | P/N: 8210000C-, 8210000D-, 8210000N-